

# MONTERINGSANVISNING/ INSTALLATION INSTRUCTIONS


**SV** För inåtgående fönster **GB** For inward windows

## SV Monteringsanvisning

Montera beslaget på ett avstånd 5-15 cm från fönsterkarmen (se skiss). Vädringsarmen ska placeras så att den kan fallas mot fönstrets gångjärnssida, vilket innebär att även fästbeslagets gap ska vara riktat mot gångjärnssidan. Se till att tapparna på fästbeslaget hamnar mitt bakom armens kil. Montering enligt anvisning ger en öppning av max 10 cm.

## GB Installation instructions

Mount fittings at a distance of 5-15 cm from the window frame (see sketch). The arm should be placed so that it can be folded against the hinge side of the window, which means that the gap of the mounted bracket must also be directed towards the hinge side. Make sure that the studs on the attachment fitting end up behind the back of the arm. Installation according to instruction gives an opening of max 10 cm.

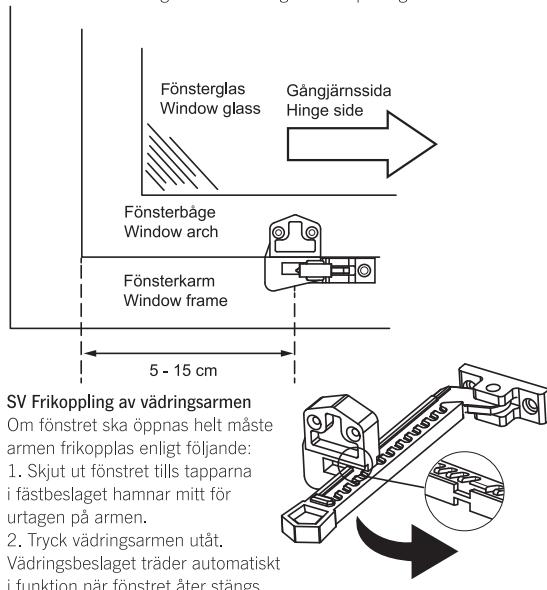

## GB Detachment of the spring arm

If the window is to be opened completely, the arm must be decoupled as follows: 1. Slide out the window until the tabs in the bracket are placed in the middle of the recesses on the arm.  
2. Push the spring arm outwards. The spring bracket automatically enters into function when the window is closed again.